

LED Status

Note for users: If you see any states besides Solid GREEN or Blinking GREEN, please contact Machine Saver technical support for troubleshooting assistance.

LED State	Description
Solid GREEN	All subsystems are good, no vibration alarms
Blinking GREEN	Vibration Alarms
Solid RED	Internal Hardware Error
Alternating 2RED, 2GREEN	Bootloader Mode
Alternating 1RED, 1GREEN	Bootloader Mode (Older Version)
Alternating 3RED, 1GREEN	Calibration Issue

Revision #2

Created 22 March 2022 17:10:55 by Bach_L

Updated 23 June 2022 06:48:09 by Bach_L